



LST11P Motor Brake Removal



LST11P Motor Brake Removal

Short Description

How to remove the brakes from an LST11P Wheelchair Motor.




LST11P Motor Brake Removal

Steps

1. Remove the plastic cap from the end of the motor by removing the three screws.



2. Cut the two small wires.

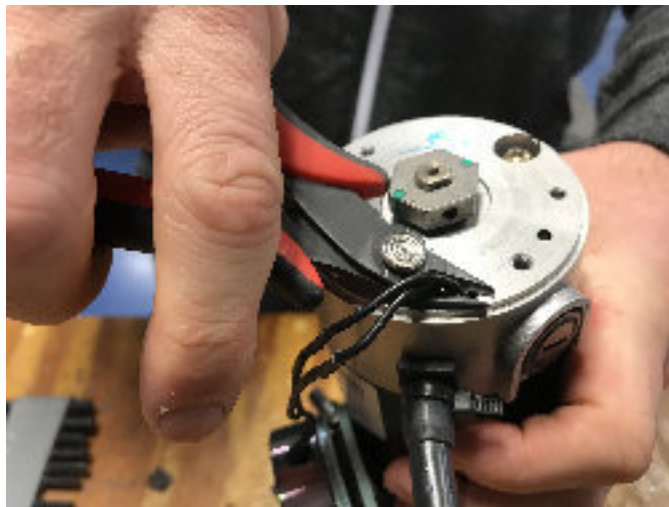



LST11P Motor Brake Removal

3. Unbolt the brake that is under the cap.



4. Remove the brake and set aside.





LST11P Motor Brake Removal

5. Remove the hex bolt adapter from the shaft.



6. Once the hex bolt is removed reattach brake onto main motor, then reattach the cap.

