
Notes:

- Tits OK to connect ground to the chassis, however use wire to connect all ground terminations (same size as +Y)
- Ensure all electronics are electrically isolated from chassis

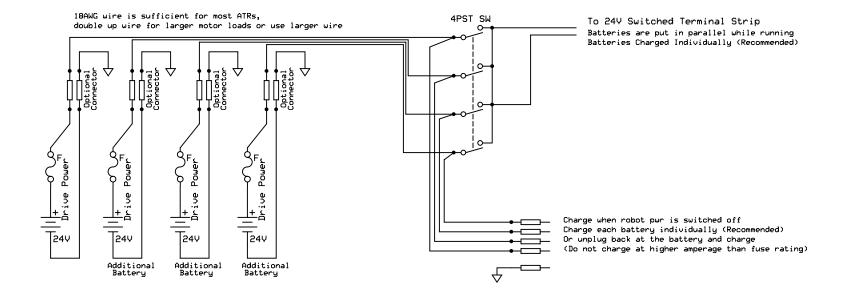

SuperDroid Robots Inc.			
Parallel	Battery	Schematic	
	Rev 1.0	Page # 1 of 1	
	9/27/07	Tage # 1 of 1	